

READ THESE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP THEM FOR FUTURE REFERENCE

YOUR CHILD'S SAFETY MAY BE AFFECTED IF YOU DO NOT FOLLOW THESE INSTRUCTIONS

WARNING: This pushchair has been designed to be operated as shown in the instructions supplied. Not to do so may cause damage and render your guarantee void.

- 1 - **TO UNFOLD:** When opening the pushchair with the adjustable handle, ensure that the handle is in the upwards positions.
- 2 - Pull the locking button rear and sideward, located on the right leg of the chassis, to unlock the chassis.
- 3 - Pull gently on handle of pushchair, and press down on metal tube of pushchair with your foot as indicated by the figure, until primary locks engage with a click. The secondary lock will automatically engage.
- 4 - **STEERING - NON-STEERING:** The front wheels can be used in either mode.
Slide lever (on both sides of chassis) to the upwards position for steering, as indicated in the figure.
For non-steering wheels press red button and lever will slide in a downward position.
NB: When using your pushchair on rough ground we recommend non-steering mode.
- 5 - **BRAKE OPERATION:** To apply brake, press down on pedal.
- 6 - To release brake, pull up the pedal.
- 7 - **TO REMOVE THE REAR WHEEL:** Press lever rearwards and at the same time pull the wheel away from the axel housing.
- 8 - **TO FIT THE REAR WHEELS:** Place axel in axel housing and press inwards.
Check by pulling wheel to confirm latching of the axel.
- 9 - **TO REMOVE THE FRONT WHEEL:** **N.B. The front wheels of this chassis can only be removed if the steering button is in a upwards position.**
Pull upwards on tab and at the same time pull the wheel away from the front leg.
- 10 - **TO FIT THE FRONT WHEELS:** **N.B. The front wheels of this chassis can only be fitted if the steering button is in a upwards position.**
Place wheel housing into the front leg, pulling upwards on tab and push wheel housing into front leg, until it locks into position.
Check by pulling wheel to confirm latching of the wheel housing.
- 11 - **ADJUSTABLE HANDLE HEIGHT:** Press the two buttons simultaneously and rise or lower the handle bar as required.
- 12 - **TO FIT CARRYCOT / SEAT:** Seat may be forward or rear facing.
Place carrycot / seat runners in attachment points (B) on both sides. Lower into position (A) and lock will automatically engage.
Ensure seat frame runners are secure at all 4 attachment points (A & B on both sides).
Warning: Check that the pram body or seat unit attachment devices are correctly engaged before use.
TO REMOVE CARRYCOT / SEAT: Push in red button and turn knob while lifting carrycot / seat away from frame.
- 13 - **FOLD PUSHCHAIR:**
N.B. Please remember to lock the swivel wheels in the non-steering mode before folding chair.
When folding the pushchair ensure that the adjustable handle is in one of the middle positions.
To fold, firstly press the red button and simultaneously, turn the handle collar in the direction of the "FOLD" and the chair will begin to close.
- 14 - Operate secondary safety device by pulling the plastic tab.
Tilt the chair forward and continue the folding action until the chassis is fully closed.
- 15 - **TO LOCK PUSHCHAIR:** Slide the locking button sideward and forwards to lock the chassis as indicated.
- 16 - **TO STORE PUSHCHAIR:** Fold adjustable handle as shown in the figure.
- 17 - **BASKET:** To attach the basket, pass the webbing and press-stud through the frame as shown.
Attach the back edge of the basket around the rear cross member.



WARNING - A CHILD'S SAFETY IS YOUR RESPONSIBILITY

Conform to EN 1888:2003 / BS 7409:1996

This vehicle is intended for children from 0 months of age and up to maximum weight 15kg.

WARNING It may be dangerous to leave your child unattended.

COMPATIBILITY: Seat - TS Plus & Carrycot - TRACK

WARNING: Ensure that all locking devices are engaged before use.

WARNING: Do not add a mattress thicker than 20 mm.

WARNING: Use a harness as soon as your child can sit unaided.

Never carry more children in the pushchair than it was design for.

It may be unsafe to use accessories, e.g. child seats, bag hooks, rain cover etc. other than those approved by **BÉBÉCAR**. It may be unsafe to use replacement parts, other than those supplied or approved by **BÉBÉCAR**.

WARNING: Any load attached to the handle affects the stability of the pushchair.

Always apply brakes when loading or unloading child.

WARNING: Always use the crotch strap in combination with the waist belt.

Additional attachment points called 'D' rings are provided on the seat lap strap and in the centre of the carrycot for the attachment of a separate safety harness.

WARNING: Check that the pram body or seat unit attachment devices are correctly engaged before use.

WARNING: This product is not suitable for running or skating.

The child should be clear of moving parts while making adjustments.

This vehicle requires regular maintenance by the user.

Overloading, incorrect folding and the use of non-approved accessories may damage or break this vehicle.

If a shopping basket is supplied, the maximum permissible load is 5kg, evenly distributed.

Never allow a child to attempt to operate this vehicle. Remember, it is not a toy.

It is not advisable to have sources of heat (open electric or gas fires etc) near this product.

This vehicle should be regularly checked for wear.

Wheels, swivel units and other moving parts of the chassis should be kept free of accumulated dirt and should be regularly lubricated with a silicon spray. Do not use oil.

Please remember that this vehicle is not waterproof. You must use a **BÉBÉCAR** PVC raincover, and that raincover must be raised or removed when inside to give adequate ventilation. After use in wet weather, ensure both the vehicle and PVC raincover are thoroughly dried and aired before storage or further use. Dry metal and plastic parts with a soft cloth.

Read and keep the instructions supplied.

Note: For washing instructions and Service Agents Network see separate list.

GUARANTEE

All **BÉBÉCAR** products have a period of guaranteed subject to the local law of the country in which it is being sold, from the date of purchase, against mechanical defects which will be repaired, or parts replaced free of charge within this period. This is conditional upon the product having been used for the purpose for which it was designed and no liability is accepted for defects arising out of fair wear and tear, undue force, neglect or accident.

In furtherance of their policy of continuous product development **BÉBÉCAR**
reserve the right to make specification and design changes.